


**SAAB****MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS
MONTAGEANLEITUNG · INSTALLATIONS DE MONTAGE**

Saab 9-5


Wiring harness, signal monitoring/charging

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
400 106 324	3:71-26	June 98	48 07 020	48 07 020 May 98

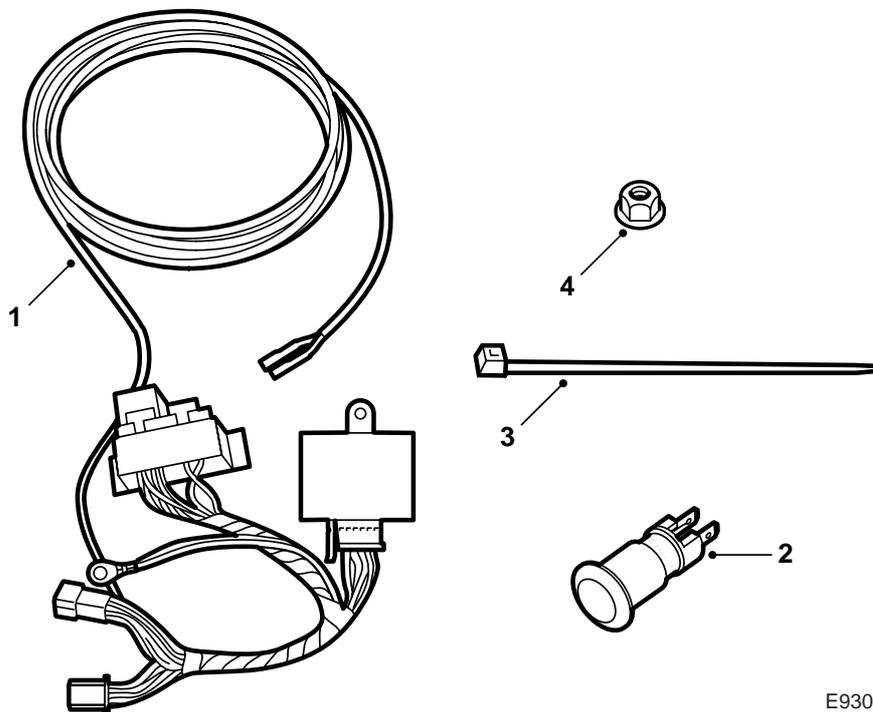

E930A024

- 1 Wiring harness kit
- 2 Indicator lamp
- 3 Cable tie (5)
- 4 Plastic nut (3)

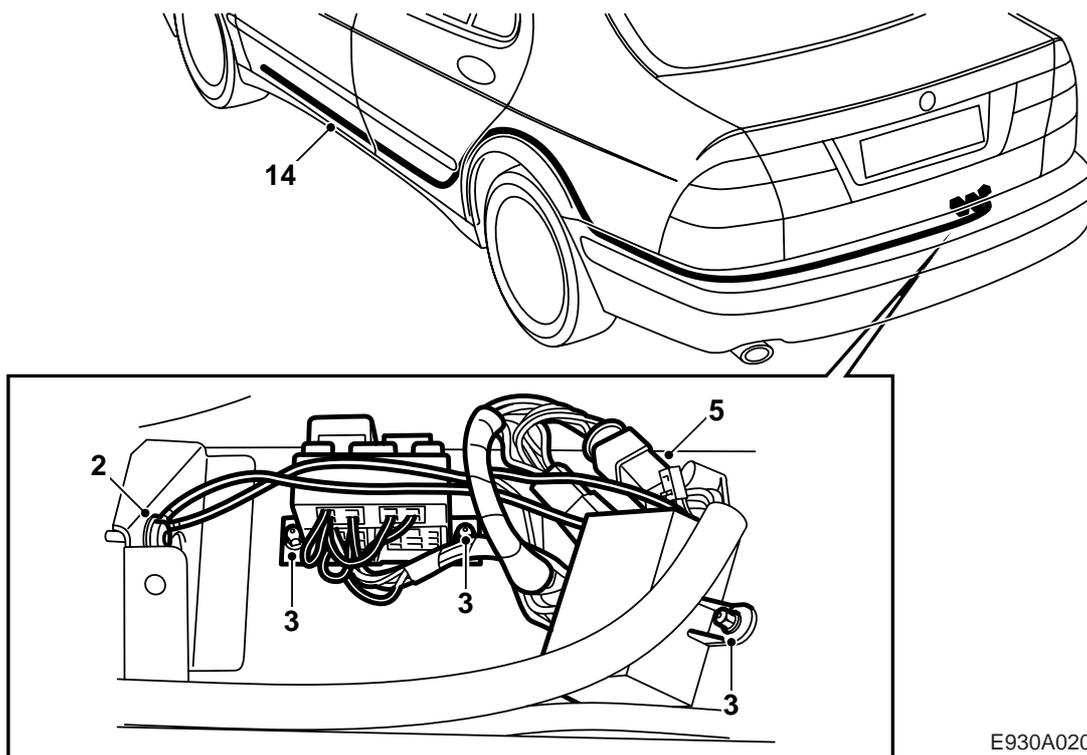

E930A020

- 1 Remove the cover on the rear bumper abutment and lift up the luggage compartment carpet.
- 2 Connect the ground cable of the signal monitor to the grounding point on the right-hand reinforcing plate.

If the towing attachment's wiring harness is not fitted, drill a 5 mm hole in the right-hand reinforcing plate for a grounding point. Scrape around the hole to ensure a good ground.

Connect the ground cable.

- 3 Fit the control module and relay box onto the welded bolts on the rear bumper abutment.
- 4 Unplug the towing attachment's wiring harness connector.
- 5 Connect the wiring harness for the control module and relay box between the car's wiring harness and the towing attachment's wiring harness.


- 6 If the indicator lamp is **not** to be used:

Secure the wiring harness at the front so that the jack does not chafe the leads. Continue with point 19.


- 7 If the indicator lamp is to be used:

Lift up and fold back the carpet on the left-hand side of the luggage compartment.

- 8 Raise the rear seat cushion and tip the backrest forwards.
- 9 Remove the front and rear door scuff plates for the wiring harness on the left-hand side.
- 10 LHD: Remove the cover beside the pedals.
RHD: Remove the cover below the glove box lid.

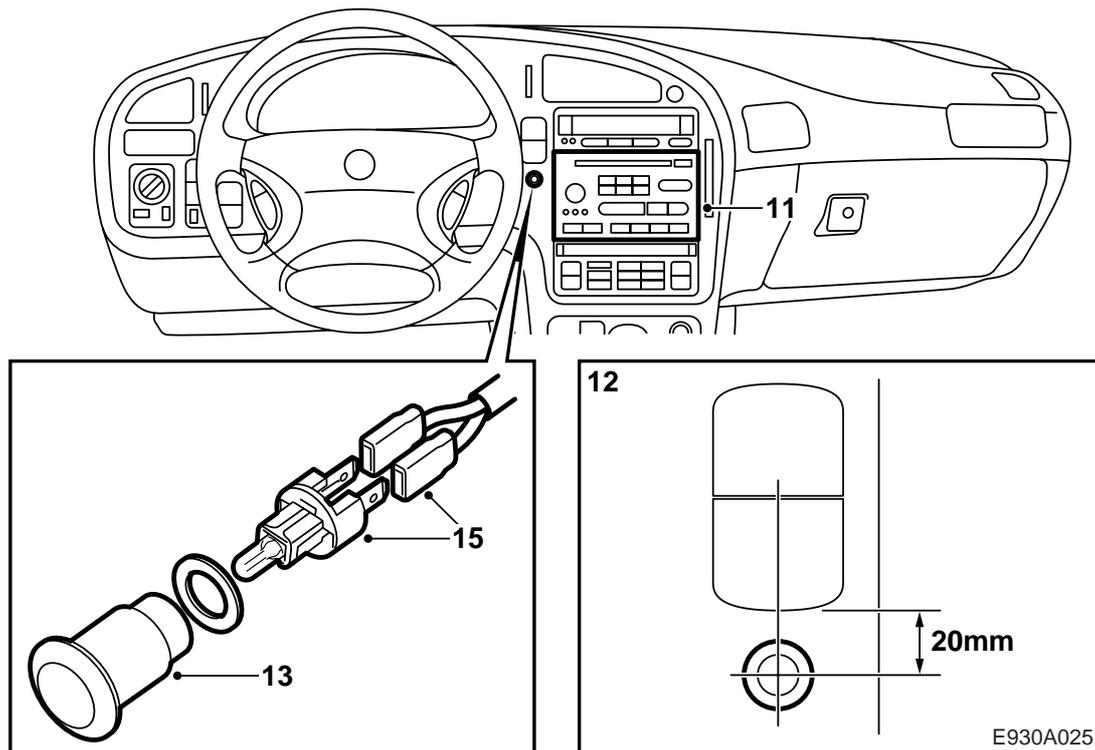

- 11 Remove the radio and radio console.
- 12 Drill a hole with an 12 mm bit in the dashboard below the switch unit between the radio and steering wheel.
- 13 Dismantle the lamp holder and fit the lens in the hole by means of the clip.
- 14 Run the lamp's wiring harness alongside the regular wiring harness over the rear wheel housing, down to the sill and up to the lamp holder.
- 15 Connect the wiring harness to the lamp and mount it in the lens holder.
- 16 Secure the wiring harness to the existing wiring harness (RHD: tape the wiring harness to the wheel housing).
- 17 Secure the wiring harness with cable ties.
NOTE: the leads should not come into contact with moving parts. The wiring harness must be secured at the front in the luggage compartment so that the jack does not chafe the leads.
- 18 Check the functionality of the wiring and lamp.
- 19 Refit the components that have been removed.

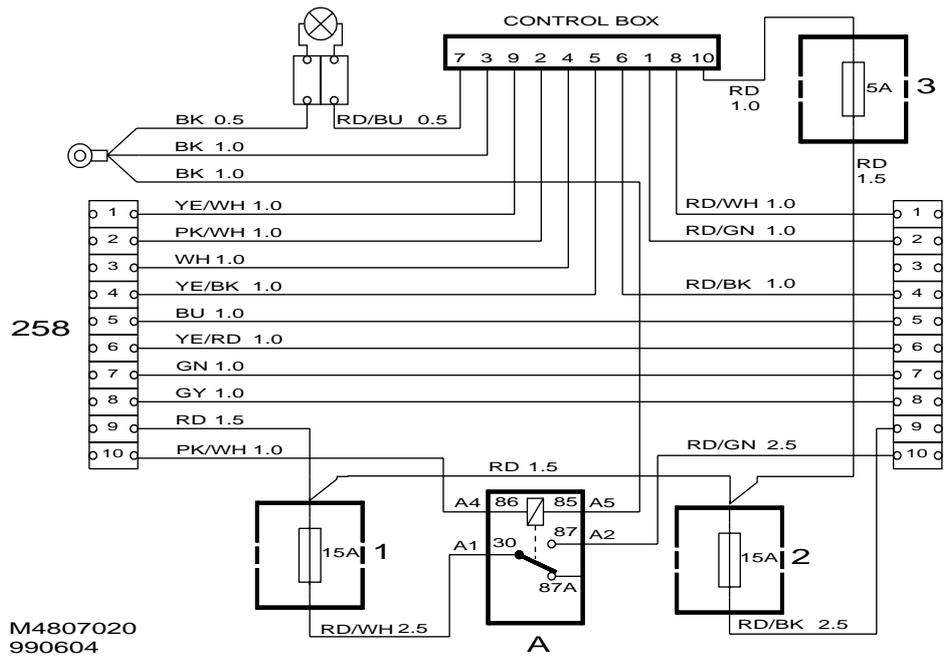

Wiring diagram

258 Electrical connections for the car's trailer connector