




MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS
MONTAGEANLEITUNG · INSTRUCTIONS DE MONTAGE

Saab 9-5


Wiring harness, signal monitoring

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
400 106 316	3:71-25	Nov 03	48 05 149	48 05 149 Jun 98

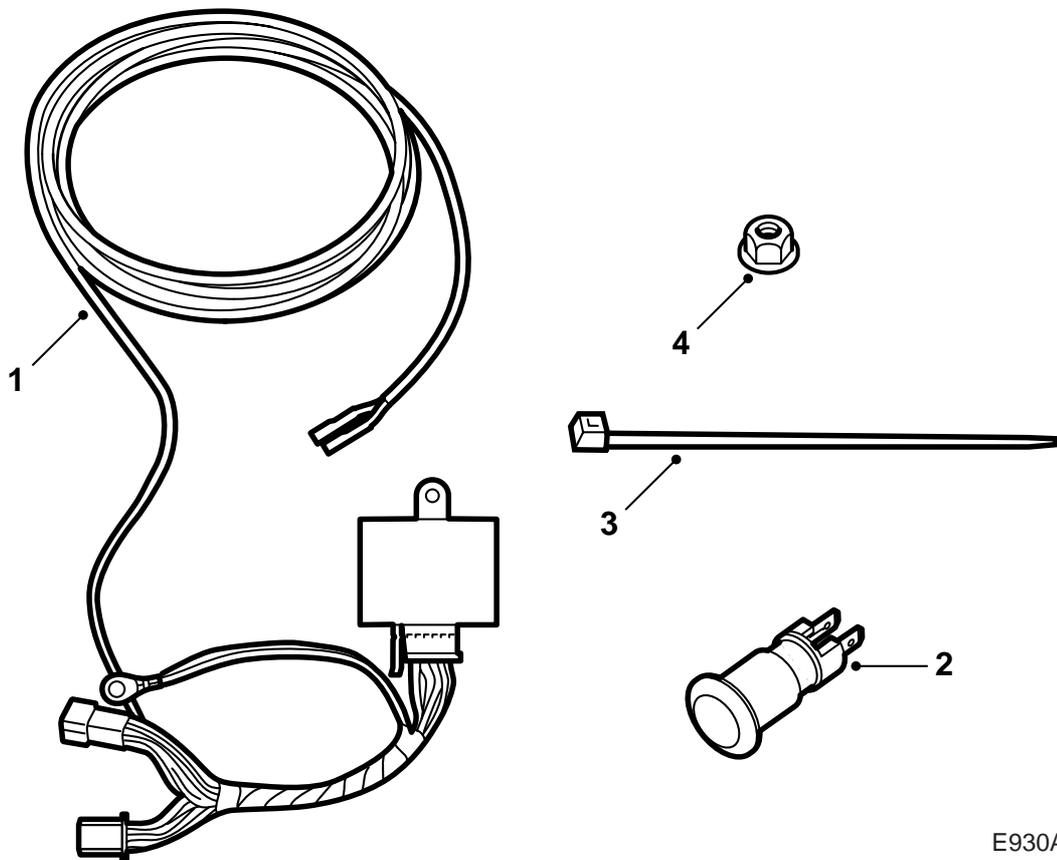


E930A021

- 1 Wiring harness kit
- 2 Indicator lamp
- 3 Cable tie (x5)
- 4 Plastic nut

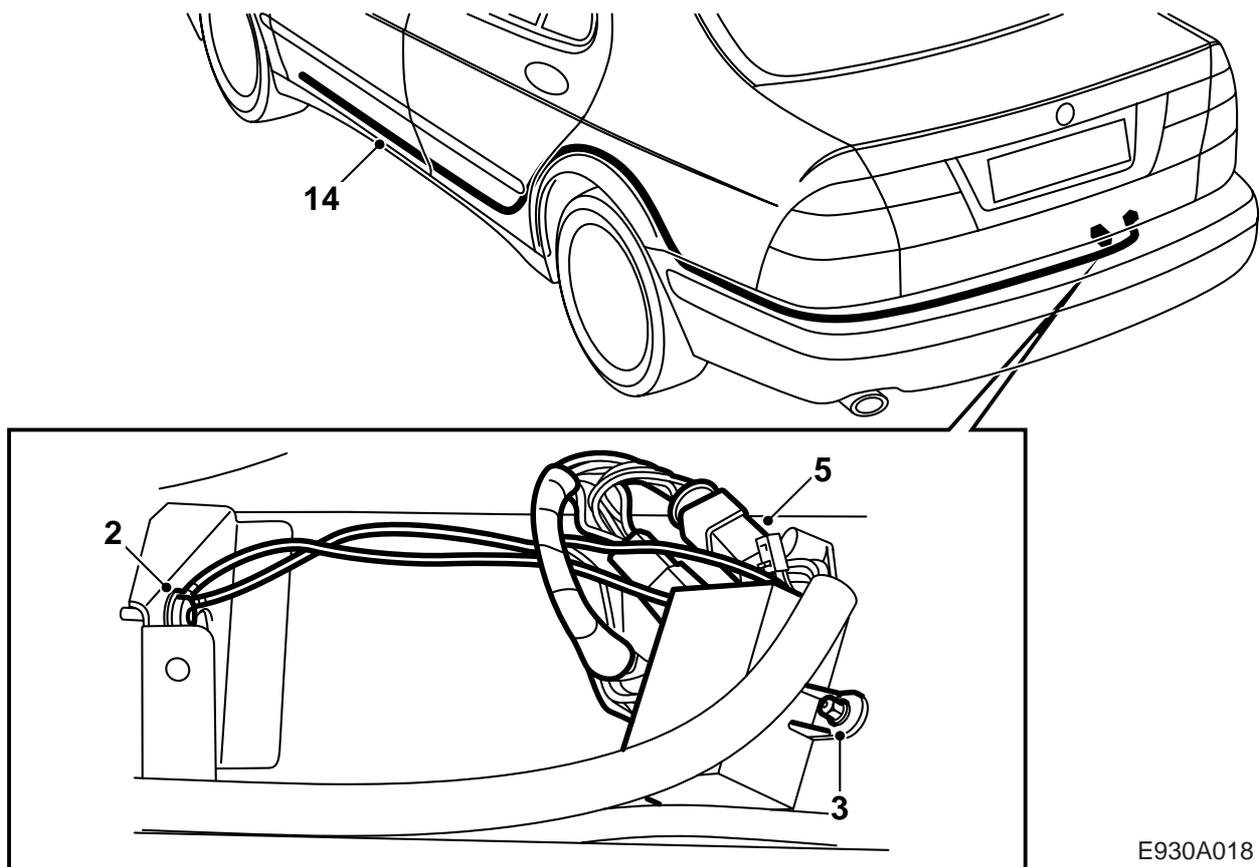

E930A018

- 1 Remove the cover on the rear bumper abutment and lift up the luggage compartment carpet.
- 2 Connect the signal monitoring ground cable to the grounding point on the right-hand reinforcement plate.
If the towing attachment's wiring harness is not fitted: Drill into the right-hand reinforcement plate, using a 5.0 mm drill bit, in order to create a ground connection. Scrape away around the drilled hole to obtain a better ground contact. Connect the ground cable.
- 3 Fit the control module onto the welded bolt on the rear bumper abutment.
- 4 Unplug the towing attachment's wiring harness connector.
- 5 Connect the wiring harness for the control module and relay box between the car's wiring harness and the towing attachment's wiring harness.
- 6 Cut off the red/white cable which is set in the lug outside the car's wiring harness next to the connector for the towing attachment's wiring harness. Insulate the ends of the cable and secure them next to the wiring harness.
- 7 **If the indicator lamp is not to be used:** Secure the wiring harness at the front edge so that the jack does not chafe the harness. Continue with step 19.
If the indicator lamp is to be used: Fold aside the trim on the left-hand side of the luggage compartment.
- 8 Raise the rear seat cushion and tip the backrest forwards.
- 9 Remove the front and rear door scuff plates for the wiring harness on the left-hand side.
- 10 **LHD:** Remove the cover by the pedals.
RHD: Remove the cover under the glove box lid.

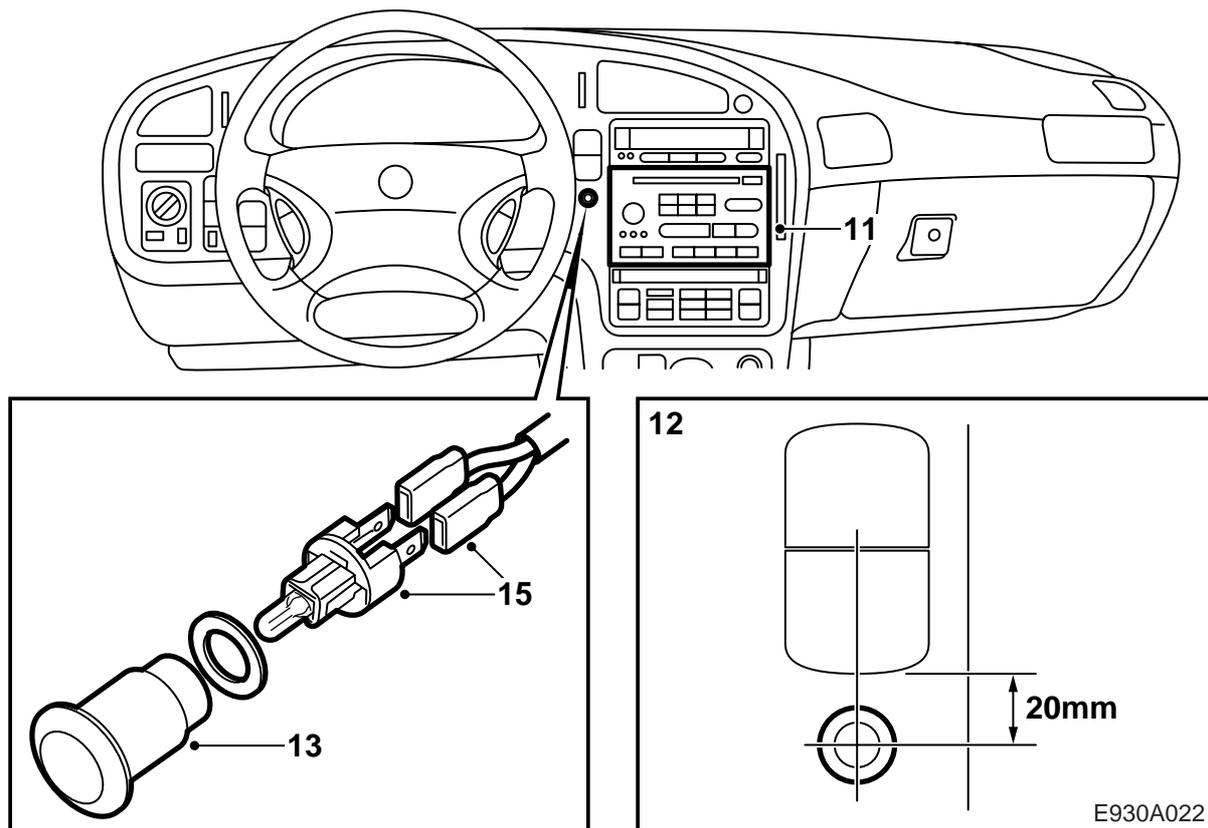


- 11 Remove the radio and radio console.
- 12 Drill a 12 mm hole in the dashboard under the switch panel between the radio and the steering wheel.
- 13 Dismantle the lamp holder and fit the lens in the hole by means of the clip.
- 14 Run the lamp's wiring harness alongside the regular wiring harness over the rear wheel housing, down to the sill and up to the lamp holder.
- 15 Connect the wiring harness to the lamp and mount it in the lens holder.
- 16 **LHD:** Secure the harness in the existing harness.
RHD: Tape the harness securely to the wheel housing.
- 17 Secure the harness with the cable ties.

Important

The wiring harness must not come into contact with moving parts. In the luggage compartment the harness must be secured at the front edge so that the jack does not chafe against the harness.

- 18 Check the functionality of the wiring and lamp.
- 19 Refit the components that have been removed.

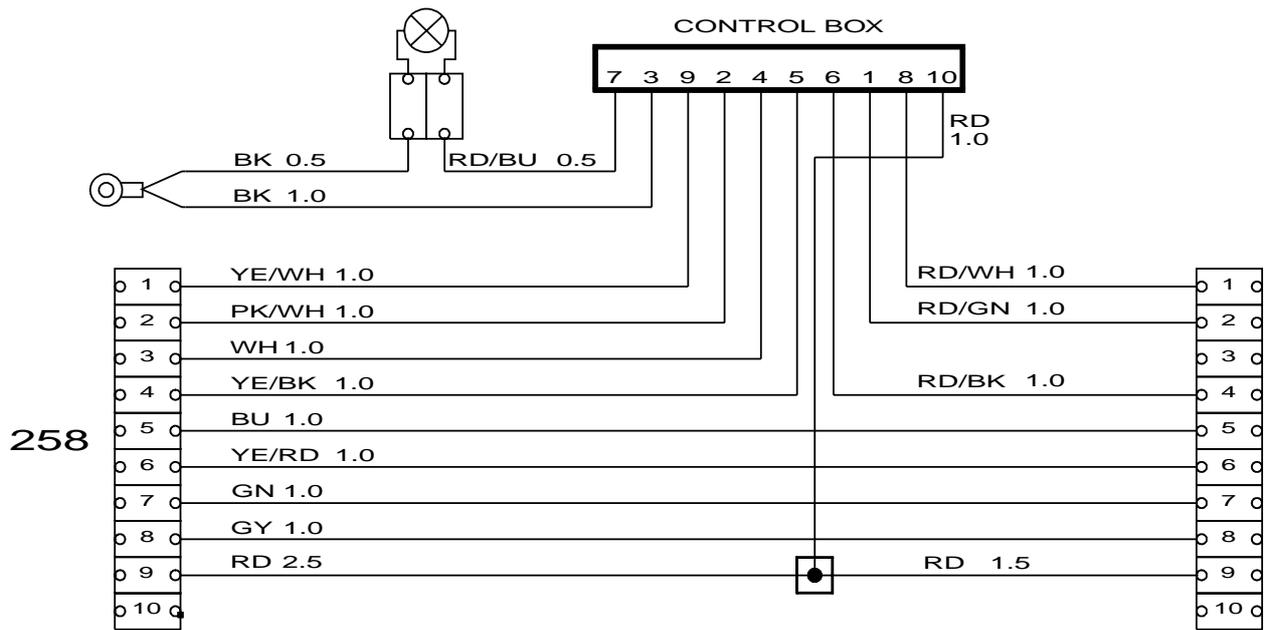

M4805149
990604

Wiring diagram

258 Electrical connections for the car's trailer connector