



MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS MONTAGEANLEITUNG · INSTALLATIONS DE MONTAGE

Saab 9-5 Adapter harness, mobile telephone connection

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
400 108 130	9:36-06	May 00	49 42 017	49 42 017 Apr 99

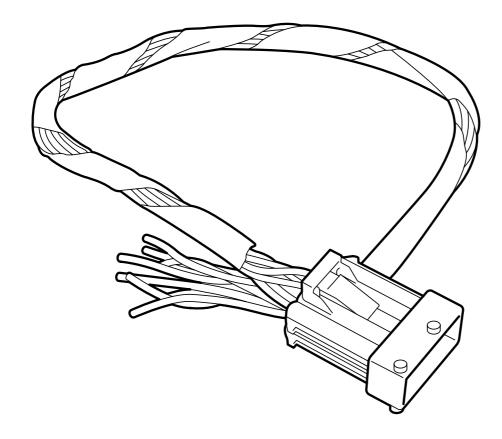

E930A026

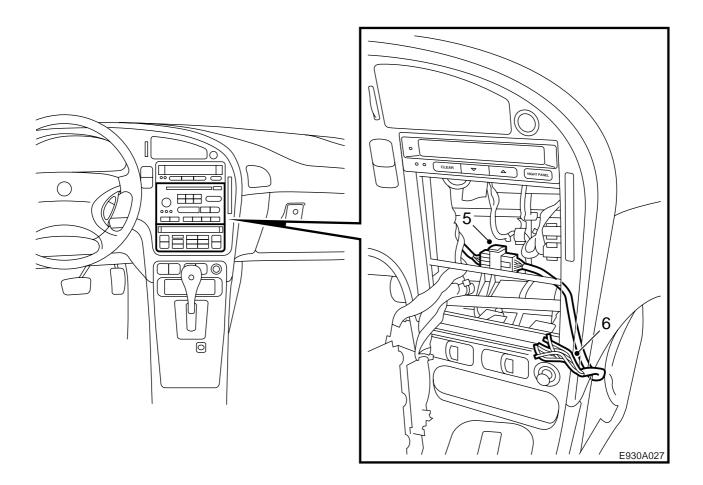

Saab 9-5 is prepared for installation of a mobile phone in two ways:

Telephone prepared (Tel 0) and Handsfree prepared (Tel 1). The adapter harness works in both cases.

Note

(Only applies with Handsfree prepared model, Tel 1.) Before starting to work, check with the telephone manufacturer if the telephone uses high or low level for the microphone output.

1 **Saab Audio System:** Press the special tools that are included with the radio into the designated holes. Press until the tools are attached, a click should be heard. Then pull out the radio with the tools.

Non Saab Audio System: Remove the storage compartment above the radio. Remove the radio.

- 2 Remove the ACC or MCC control panel.
- 3 Plug the adapter cable assembly into the mobile telepfone connector on the fan housing.
- 4 Run the adapter cable assembly down to the telephone holder.

5 Connect respective lead in the adapter harness to the mobile phone connector in the car. For correct installation, see the table below for connections in the car connector (10-pin connector), as well as wiring diagram for each respective telephone. Compare functions for the different connections.

Connection in car

Pin	Telephone prepared car (Tel 0)	Handsfree prepared car (Tel 1)	
1	12V (+30) Power supply	12V (+30) Power supply	
2	12V (+15) Key-con- trolled voltage	12V (+15) Key-con- trolled voltage	
3	Microphone ground	Microphone ground	
4	Ground	Ground	
5	Telephone Mute	Telephone Mute	
6	Rheostat	Rheostat	
7	Not connected	Telephone line output signal	
8	Not connected	Telephone line output ground	
9	Not connected	Not used	
10	Not connected	Microphone high/ low level output	

6 Remove the overhead console and use the table below to check that the car microphone is connected in accordance with telephone manufacturer specifications regarding low/high signal.

If needed, disconnect the contact housing for the microphone and move the cable connector with pins to the correct place in the housing, see the table below.

Microphone 3-pin connector

Pin	Microphone 3-pin connector		
1	Microphone input, high		
2	Microphone input, low		
3	Microphone ground		

- 7 Make sure the telephone connection functions properly.
- 8 Refit the side panel and glove box.