




MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS
MONTAGEANLEITUNG · INSTRUCTIONS DE MONTAGE

Saab 9-5


Caravan rear view mirrors

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
400 112 660	9:84-07	Oct 00	86 90 513	86 90 513 Oct 98

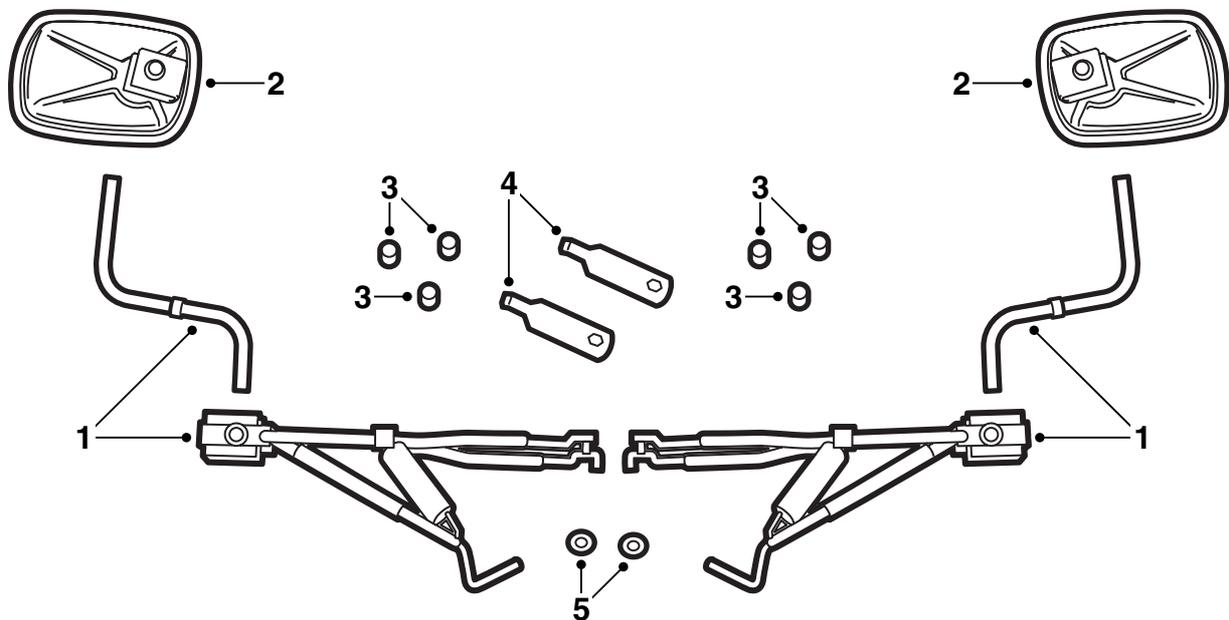

E980A143

- 1 Arm with bracket (x2)
- 2 Rear view mirror housing (2x)
- 3 Protective caps (6x)
- 4 Tool (2x)
- 5 Rubber grommet (8x)

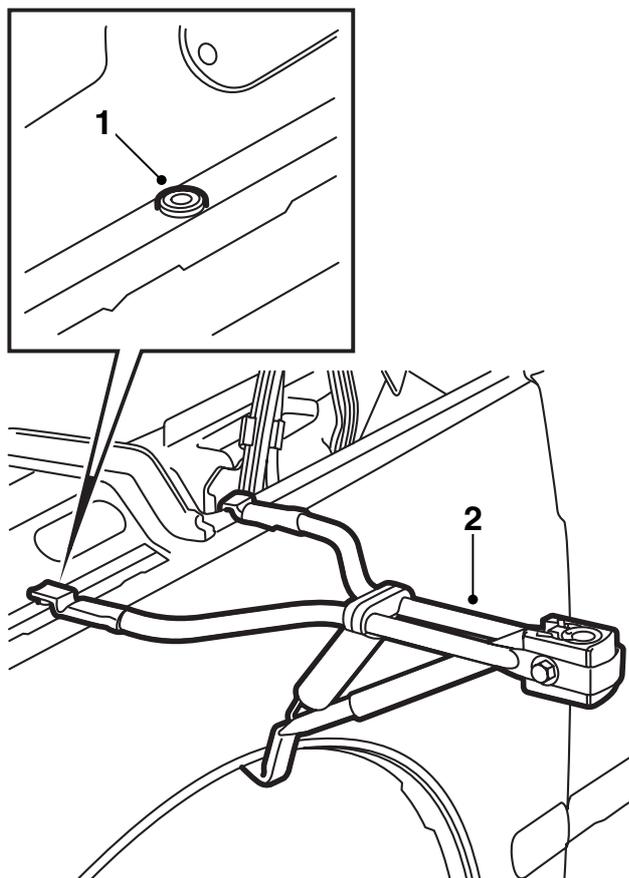

1 Open the bonnet and fit the rubber grommets into the holes, see illustration.

If the car does not have holes, see page 3.

2 Hook on the lower bracket first and then the upper brackets on the edge of the front wing. The pin fits inside the rubber grommet and the angled part hooks over the edge of the wing, see illustration.

3 Fit the arm for the rear view mirror housing. The long part is for the rear view mirror housing and the short is to be fitted to the body bracket.


⚠ WARNING

Take care in narrow passageways. These rear view mirrors are fastened strongly to the body, which means that there is risk of damaging the car or injuring pedestrians with the protruding rear view mirrors.

4 Fit the rear view mirror housing.

5 Adjust the rear view mirror housing and arm and tighten the nuts and bolts.

6 Fit the protective caps over the bolt heads and nuts.

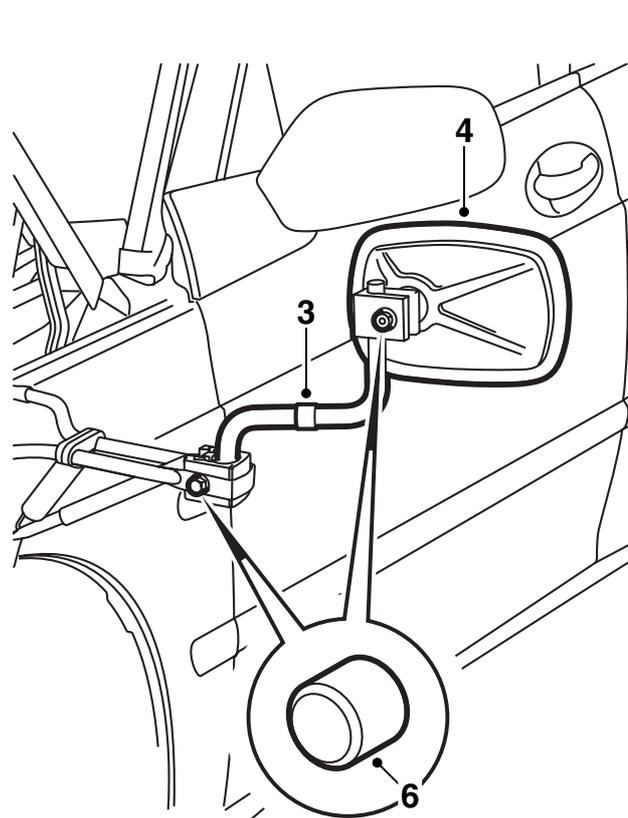


E980A144

7 Close the bonnet carefully, making sure it is not damaged by the mirror fixture.

Note

The extra rubber grommets included in the kit can be used to replace the ones fitted if they are damaged or lost.

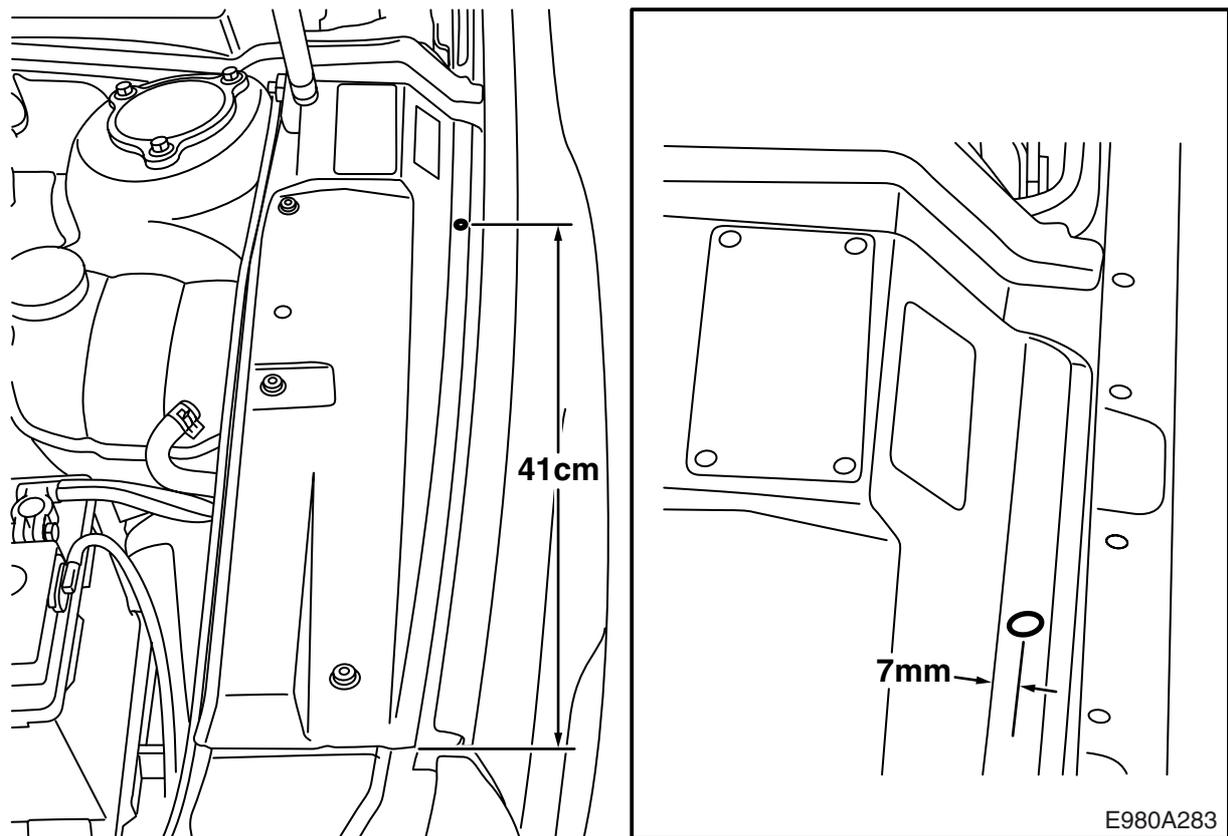

Drilling of hole for caravan rear view mirrors

The left side of the car is pictured, but the work is to be done on both sides of the car.

- 1 Measure where the hole is to be drilled, 41 cm from the edge of the metal behind the direction indicator housing and 7 mm out from the seam, and mark the spot with a punch.
- 2 Drill an 8 mm hole.
- 3 Smooth the edges of the hole and remove loose bits of metal and paint. Clean with Teroson's Cleaner FL, apply Standox 1K Füllprimer and apply a cover coat.