



MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS MONTAGEANLEITUNG · INSTALLATIONS DE MONTAGE

Saab 9-5 4D

Fitting kit, CD changer

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
400 112 595	9:36-8	May 99	50 38 641	50 38 641 Oct 98

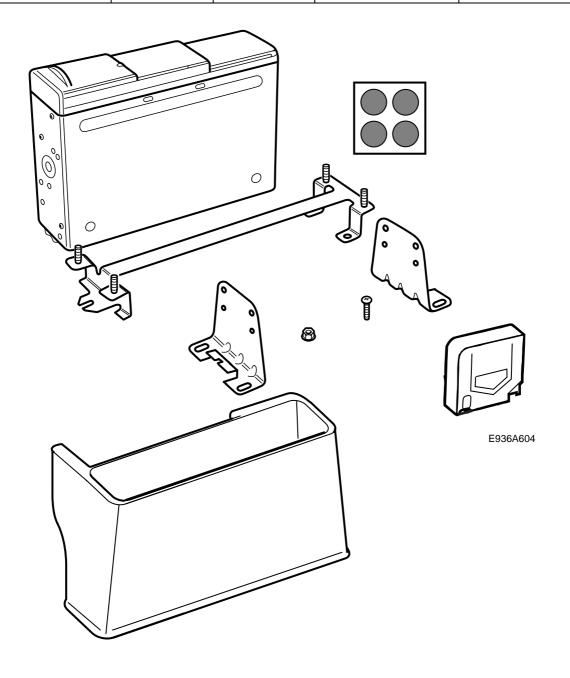

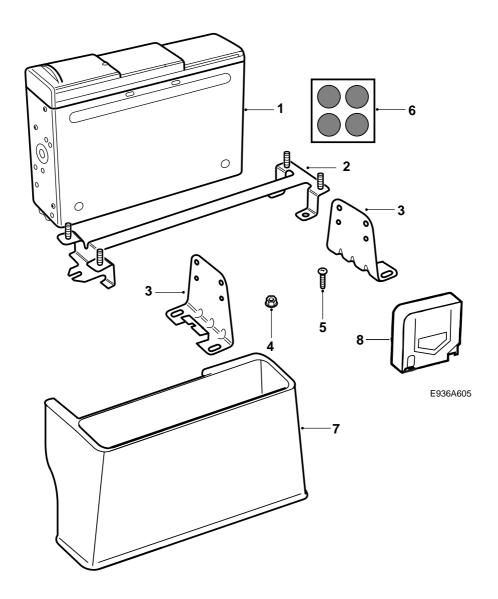

- 1 CD changer (sold separately)
- 2 Floor bracket
- 3 Bracket (2)
- 4 Nut (7)
- 5 Screw (4)
- 6 Adhesive tape (4) (supplied with CD changer)
- 7 Cover
- 8 CD magazine (supplied with CD changer)

MARNING


The CD changer is a class 1 laser product


- Service and repair of the CD changer must only be carried out by a qualified technician.
- If the outer casing of the CD changer is damaged, laser radiation may occur which may cause personal injury

Important

If it is necessary to remove the CD-changer from the car and it is not going to be fitted back in the same car, the diagnostic tool must be used to divorce it from the car via Audio System and the "Programming" menu.

The divorce must be performed while the CD-changer is fitted in the car to which it was married.

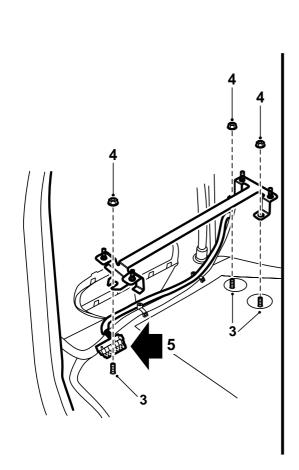

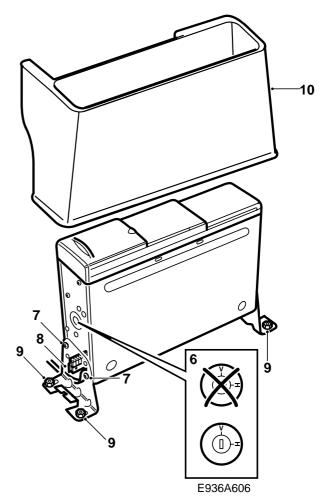

- 1 Remove the scuff plate from the luggage compartment sill.
- 2 Undo three nuts and remove the side trim.
- 3 Remove the plastic plugs covering the CD changer's mounting points.
- 4 Secure the floor bracket for the CD changer with 3 nuts.
- 5 Run the lead with the connector for the CD changer through the side trim. Fold the trim back and secure it in place.
- 6 Unscrew the 4 transport screws (2 marked red on each short side) and remove the same. Put them in the small plastic bag and cover the holes with the supplied pieces of tape. Check that the mounting position screws are in the vertical position (V).
- 7 Screw the 2 angle brackets to the CD changer.
- 8 Plug the connector into the CD changer.
- 9 Bolt the CD changer to the floor bracket using the 4 nuts.
- 10 Fit the cover on the brackets. Make sure th cover goes down all the way to its locked position. The design of the cover may make it slightly stiff when fitting.
- 11 Fit the scuff plate back on the luggage compartment sill.

- 12 Fit the CD magazine.
- 13 Connect the diagnostic tool, select Audio System and the "Programming" menu. "Marry" the CD-changer to the car. If this is not done, the CD-changer will not work.

Important

If it is necessary to remove the CD-changer from the car and it is not going to be fitted back in the same car, the diagnostic tool must be used to divorce it from the car via Audio System and the "Programming" menu.

The divorce must be performed while the CD-changer is fitted in the car to which it was married.

See the car's user manual for instructions.

The compartment between the CD-changer cover and the wall of the luggage compartment can be used to store CD's or an extra CD-magazine.